



Stereophonic

THE FISHER 500-S

SERVICE

MANUAL



MODEL 500-S

CHASSIS SERIAL NUMBERS
FROM 10001 TO 19999 INCLUSIVE

PRICE: \$1.00

FISHER RADIO CORPORATION • NEW YORK

(c) www.fisherconsoles.com

PARTS DESCRIPTION LIST

CAPACITORS

10 % tolerance for all fixed capacitors, unless otherwise noted or marked GMV (guaranteed minimum value).

Symbol	Description	Part No.
C1	Ceramic, 21uuf, 5 %, N750, 1000V	C50070-32
C2	Ceramic, 3uuf, NPO, 1000V	C50070-28
C3	AM, variable	C799-119
C4	Ceramic, .02uf, +80 -20 %, 500V	C50089-4
C5	Ceramic, 100uuf, GMV, N1500, 1000V	C50070-5
C6	Ceramic, .001uf, GMV, 1000V	C50071-2
C7	Ceramic, feedthru, .001uf, GMV	C592-187
C8	Ceramic, .02uf, +80 -20 %, 500V	C50089-4
C9	Ceramic, feedthru, .001uf, GMV	C592-187
C10, 11	Ceramic, .02uf, +80 -20 %, 500V	C50089-4
C12	Ceramic, trimmer	C662-123
C13	Mylar, .047uf, 250V	C50197-52
C14	FM, variable	C818-116
C15	Ceramic, 2.2uuf, 500V	C3039
C16	Ceramic, .001uf, GMV, 1000V	C50071-2
C17	Ceramic, 8uuf, ±.5uuf, NPO, 500V	CC20CJ080D5
C18	Ceramic, 5uuf, ±.5uuf, NPO, 500V	CC20CJ050D5
C19	Ceramic, 100uuf, GMV, N1500, 1000V	C50070-5
C20	Molded, .01uf, 20 %, 600V	C2747
C21	Ceramic, trimmer, N150	C662-123
C22	Ceramic, 24uuf, 5 %, 1000V	C50070-8
C23	Ceramic, 47uuf, 5 %, N750, 1000V	C50070-29
C24	Ceramic, 100uuf, 5 %, N1500, 1000V	C50070-19
C25	Ceramic, .005uf, 20 %, 500V	C50089-1
C26	Ceramic, 8uuf, ±.5uuf, NPO, 500V	CC20CJ050D5
C27	Ceramic, .001uf, 1000V	C50072-3
C28	Ceramic, .005uf, 20 %, 500V	C50089-1
C29	Ceramic, feedthru, .001uf, GMV	C592-187
C30	Ceramic, 100uf, GMV, N1500, 1000V	C50070-5
C31	Ceramic, 10uuf, ±.5uuf, NPO, 500V	CC20CH100D5
C32	Ceramic, .005uf, 20 %, 500V	C50089-1
C33	Electrolytic, 100uf, 250V	C50180-15
C34	Ceramic, 10uuf, ±.5uuf, N150, 500V	CC20PJ100D5
C35	Ceramic, .01uf, 20 %, 500V	C50089-3
C36	Electrolytic, two section A — 40uf 450V B — 100uf 250V	C50180-16
C37	Ceramic, 33uuf, 5 %, N750, 1000V	C50070-25
C38	Ceramic, .005uf, 20 %, 500V	C50089-1
C39	Electrolytic, three section A — 40uf 450V B — 40uf 400V C — 20uf 300V	C50180-18
C40	Electrolytic, three section A — 60uf 250V B — 60uf 250V C — 100uf 100V	C50180-17
C41, 42, 43	Ceramic, .005uf, 20 %, 500V	C50089-1
C44	Ceramic, .01uf, 20 %, 500V	C50089-3
C45	Ceramic, .0027uf, 1000V	C50072-17
C47	Ceramic, .005uf, 20 %, 500V	C50089-1
C49	Ceramic, feedthru, .001uf, GMV	C592-187
C51	Ceramic, .02uf, +80 -20 %, 500V	C50089-4
C52, 53, 54, 55	Ceramic, .005uf, 20 %, 500V	C50089-1
C56	Ceramic, .02uf, +80 -20 %, 500V	C50089-4
C59	Ceramic, .005uf, 20 %, 500V	C50089-1
C60	Ceramic, .0027uf, 1000V	C50072-17
C61, 63	Ceramic, 220uuf, 1000V	C50072-20
C64	Mylar, .047uf, 250V	C50197-52
C65	Ceramic, .005uf, 20 %, 500V	C50089-1

C68	Ceramic, .0027uf, 1000V	C50072-17
C70	Ceramic, 330uuf, 1000V	C50072-1
C71	Ceramic, .0033uf, 1000V	C50072-11
C72, 73	Ceramic, 330uuf, 1000V	C50072-1
C74	Ceramic, .05uf, +80 -20 %, 100V	C50073-2
C75	Ceramic, .005uf, 20 %, 500V	C50089-1
C76	Ceramic, .05uf, +80 -20 %, 100V	C50073-2
C77	Electrolytic, 8uf, 50V	C629-138
C78	Mylar, .047uf, 250V	C50197-52
C79	Ceramic, 47uuf, N750, 1000V	C50070-4
C80	Ceramic, .68uuf, 20 %, 500V	C50077-6N
C81, 82	Ceramic, 100uuf, GMV, N1500, 1000V	C50070-5
C83, 84	Ceramic, .01uf, 20 %, 500V	C50089-3
C85, 86	Mylar, .022uf, 400V	C50197-28
C87	Ceramic, .05uf, +80 -20 %, 100V	C50073-2
C88, 89	Ceramic, 39uuf, N1500, 1000V	C50070-17
C90, 91	Ceramic, .02uf, 20 %, 500V	C50089-5
C92, 93	Ceramic, .05uf, +80 -20 %, 100V	C50073-2
C94, 95	Ceramic, 82uuf, 5 %, N1500, 1000V	C50070-33
C96, 97	Ceramic, .001uf, 1000V	C50072-3
C98, 99	Ceramic, .0039uf, 1000V	C50072-34
C100, 101	Ceramic, .02uf, 20 %, 500V	C50089-5
C102, 103	Ceramic, 68uuf, N2200, 1000V	C50070-12
C104	Ceramic, 3uuf, NPO, 1000V	C50070-28
C105, 106	Ceramic, .02uf, 20 %, 500V	C50089-5
C107	Ceramic, 3uuf, NPO, 1000V	C50070-28
C108, 109	Electrolytic, 25uf, 6V	C639-114
C110, 111	Ceramic, 150uuf, 1000V	C50072-18
C112, 113, 114, 115	Mylar, .047uf, 400V	C50197-30
C116, 117	Ceramic, 18uuf, N470, 1000V	C50070-13
C118, 119	Ceramic, 330uuf, 1000V	C50072-1
C120	Molded, .01uf, 20 %, 600V	C2747

RESISTORS AND POTENTIOMETERS

In ohms, 10 % tolerance, 1/2 watt, unless otherwise noted. K=Kilohm, M=Megohm.

Symbol	Description	Part No.
R1	Composition, 100K	RC20BF104K
R2	Composition, 1.5M	RC20BF155K
R3	Composition, 820K	RC20BF824K
R4	Composition, 100	RC20BF101K
R5	Composition, 47K	RC20BF473K
R7	Composition, 470	RC20BF471K
R8	Composition, 820	RC20BF821K
R9	Composition, 820K	RC20BF824K
R10	Composition, 150K	RC20BF154K
R11	Composition, 22K	RC20BF223K
R12	Composition, 18K, 1W	RC30BF183K
R13	Composition, 1K	RC20BF102K
R14	Composition, 470	RC20BF471K
R15	Composition, 100	RC20BF101K
R16	Glass, 1.5K, 5W	RPG5W 152K
R17	Wirewound, 220, 5W	R551-137
R18	Composition, 2.7K, 1W	RC30BF272K
R19	Wirewound, 220, 5W	R551-137
R20	Composition, 270	RC20BF271K
R21	Composition, 150	RC20BF151K
R22	Composition, 270	RC20BF271K
R23	Composition, 2.7K, 1W	RC30BF272K
R24	Composition, 22K	RC20BF223K
R25	Composition, 47K	RC20BF473K
R26	Composition, 1K	RC20BF102K
R27	Composition, 180	RC20BF181K
R28	Composition, 100K	RC20BF104K
R29	Composition, 27K	RC20BF273K
R30	Composition, 150	RC20BF151K

PARTS DESCRIPTION LIST

R31 Composition, 1K
 R32 Composition, 68K
 R33, 34 Composition, 220
 R35 Dep. Carbon, 47K, 5%, 1/3 W
 R36 Dep. Carbon, 100K, 5%, 1/3 W
 R37 Dep. Carbon, 47K, 5%, 1/3 W
 R39 Composition, 68K
 R38 Composition, 47K
 R40 Composition, 1K
 R41 Composition, 2.2M
 R42 Composition, 47K
 R43 Composition, 22M
 R44, 45 Composition, 470K
 R46 Composition, 68K
 R47 Composition, 1K
 R48 Composition, 270
 R49 Dep. Carbon, 22K, 5%, 1/3 W
 R50 Composition, 1.5K
 R51 Composition, 1K
 R52, 53 Composition, 6.8K
 R54 Composition, 330K
 R55 Composition, 100K
 R56 Composition, 820K
 R57 Composition, 1.2M
 R58 Composition, 1M
 R59, 60, 61 Dep. Carbon, 100K, 5%, 1/3 W
 R62 Composition, 10
 R63 Dep. Carbon, 100K, 5%, 1/3 W
 R64 Composition, 10
 R65 Dep. Carbon, 10K, 5%, 1/3 W
 R66 Dep. Carbon, 2.7K, 5%, 1/3 W
 R67 Dep. Carbon, 10K, 5%, 1/3 W
 R68 Dep. Carbon, 2.7K, 5%, 1/3 W
 R69, 70 Dep. Carbon, 330K, 5%, 1/3 W
 R71, 72 Composition, 4.7M
 R73, 74 Dep. Carbon, 220K, 5%, 1/3 W
 R75, 76 Potentiometer, 250K, Phono level
 R77, 78 Dep. Carbon, 470K, 5%, 1/3 W
 R79, 80 Composition, 5.6M, 5%
 R81 Dep. Carbon, 220K, 5%, 1/3 W
 R82 Potentiometer, dual, 1M, bass
 R83 Dep. Carbon, 220K, 5%, 1/3 W
 R85, 86 Composition, 560
 R87, 88 Dep. Carbon, 100K, 5%, 1/3 W
 R89, 90 Composition, 39K
 R91 Potentiometer, dual, 1M, treble
 R93, 94 Dep. Carbon, 220K, 5%, 1/3 W
 R95, 96 Composition, 10M
 R97, 98 Composition, 3.3M, 5%
 R99, 100 Composition, 2.2M
 R101, 102 Dep. Carbon, 100K, 5%, 1/3 W
 R103 Composition, 560
 R104 Potentiometer, dual, 300K, balance
 R106 Composition, 560
 R107, 108 Dep. Carbon, 220K, 5%, 1/3 W
 R109 Dep. Carbon, 47K, 5%, 1/3 W
 R110 Potentiometer, dual, 500K, volume
 R111, 112 Dep. Carbon, 22K, 5%, 1/3 W
 R114 Dep. Carbon, 47K, 5%, 1/3 W
 R115 Dep. Carbon, 3.9K, 5%, 1/3 W
 R116 Dep. Carbon, 220, 5%, 1/3 W
 R117 Dep. Carbon, 3.9K, 5%, 1/3 W
 R118 Dep. Carbon, 220, 5%, 1/3 W
 R119, 120 Composition, 680K
 R121, 122 Dep. Carbon, 3.9K, 5%, 1/3 W

RC20BF102K
 RC20BF683K
 RC20BF221K
 R33DC473J
 R33DC104J
 R33DC473J
 RC20BF683K
 RC20BF473K
 RC20BF102K
 RC20BF225K
 RC20BF473K
 RC20BF226K
 RC20BF474K
 RC20BF683K
 RC20BF102K
 RC20BF271K
 R33DC223J
 RC20BF152K
 RC20BF102K
 RC20BF682K
 RC20BF334K
 RC20BF104K
 RC20BF824K
 RC20BF125K
 RC20BF105K
 R33DC104J
 RC20BF100K
 R33DC104J
 RC20BF100K
 R33DC103J
 R33DC272J
 R33DC103J
 R33DC272J
 R33DC334J
 RC20BF475K
 R33DC224J
 R50160-3
 R33DC474J
 RC20BF565J
 R33DC224J
 R50160-51-1
 R33DC224J
 RC20BF561K
 R33DC104J
 RC20BF393K
 R50160-51-2
 R33DC224J
 RC20BF106K
 RC20BF335J
 RC20BF225K
 R33DC104J
 RC20BF561K
 R50160-53
 RC20BF561K
 R33DC224J
 R33DC473J
 R50160-52
 R33DC223J
 R33DC473J
 R33DC392J
 R33DC221J
 R33DC392J
 R33DC221J
 RC20BF684K
 R33DC392J

R123, 124 Dep. Carbon, 47K, 5%, 1/3 W
 R125 Composition, 27K
 R126 Potentiometer, 25K
 R127 Composition, 27K
 R128 Potentiometer, 25K
 R129 Composition, 18K
 R130 Potentiometer, 5K
 R131 Composition, 4.7K
 R132, 133,
 134, 135 Dep. Carbon, 330K, 5%, 1/3 W
 R136, 137,
 138, 139 Dep. Carbon, 2.7K, 5%, 1/3 W
 R140, 141 Dep. Carbon, 47K, 5%, 1/3 W
 R142, 143 Dep. Carbon, 120K, 5%, 1/3 W
 R144 Dep. Carbon, 100K, 5%, 1/3 W
 R145, 146 Dep. Carbon, 270K, 5%, 1/3 W
 R147, 148 Composition, 2.2M

R33DC473J
 RC20BF273K
 R806-125
 RC20BF273K
 R806-125
 RC20BF183K
 R50103-4
 RC20BF472K
 R33DC334J
 R33DC272J
 R33DC473J
 R33DC124J
 R33DC104J
 R33DC274J
 RC20BF225K

COILS, CHOKES AND TRANSFORMERS

Symbol	Description	Part No.
L1	Choke, 3.3 micro-henry	L50066-8
L2	AM, ferrite loop	L50210-25
L3	FM, ant. coil	L818-113
L4	Choke, 1.5 micro-henry	L50066-4
L5	Choke, R.F.	L629-180
L6	FM, R.F., Coil	L818-114
L7	FM, osc. coil assembly	AS818-118
L8	Choke, .68 micro-henry	L50066-1
L9	Choke, .2 micro-henry	L50066-21
L10	AM, osc. coil	L50210-22
L11, 12, 13, 14, 15, 16, 17	Choke, ferrite bead	L592-189
T1	Transformer, power	T799-115
T2, 3	Transformer, output	T799-116
Z1	Transformer, FM, I.F.	ZZ662-117
Z2	Transformer, FM, I.F.	ZZ2987
Z3	Coil, FM, limiter assembly	L670-145
Z4	Transformer, FM, det.	ZZ592-170
Z5	Transformer, AM, R.F.	L50210-23
Z6	Transformer, AM, I.F.	ZZ50210-1
Z7	Transformer, AM, I.F.	ZZ2984

MISCELLANEOUS

Symbol	Description	Part No.
CR1, 2	Silicon diode, SD95A	SR806-126
CR3, 4	Diode, matched pair, 1N542	V-1N542
CR5	Diode, 1N38	V-1N38
F1	Fuse, 3.2A, Slo-blo	F3319
I1, 2	Dial lamp	L50082-6
PC1, 2	Printed circuit, phon. equ.	PC50187-3
PC3, 4	Printed circuit, tone control	PC50187-4
PC5, 6	Printed circuit, high freq. filter	PC50187-2
S1	Switch, selector	S799-125
S2, 3, 4, 5, 6, 7, 8, 9, 10	Switch, slide	S50200-2
S11	Switch, power	part of R110
—	FM, dipole assembly	A50227-1
—	Dress panel	AS799-130-1
—	Knob, dual, bottom	E50221
—	Knob, dual, top	E50220
—	Knob, tuning	E50224-2
—	Knob, dummy, dual	E50222-1
—	Dial glass	N799-107

ALIGNMENT INSTRUCTIONS

Read These Instructions With Extreme Care Before Attempting Alignment.

CHASSIS: Turn the station selectors completely counterclockwise, without forcing. Dial pointers should be at zero index mark on logging scale. If not, reset the dial pointers. Disconnect the external antennas and the antenna link. Set Ferrite Loop to normal position, parallel to rear panel. When using an oscilloscope for alignment, set the output level controls for no overload, as shown by the proper waveform shape. Connect leads to main output and turn volume control to minimum.

SIGNAL GENERATORS: The signal generator equipment must be able to supply the following: FM RF modulated 30% (± 22.5 KC deviation) at 400 cps; AM RF modulated 30% at 400 cps;

AM IF with 30KC swetp for AM bandwidth edjusement.

INDICATOR: DC VTVM, AC VTVM, and scope for alignment.

ALIGNMENT: Allow the chassis and test instruments to warm up for at least fifteen minutes. Adjust the line voltage for 117 volts AC, 50-60 cycles. Use fully insulated tools: a small screw-driver for all trimming capacitors; a K-Tran tool for Z1, Z2, Z5, Z6 and Z7; a hex tool for Z3, Z4, L3, L6, L7 and L10. For AM alignment, short AVC to ground.


NOTE: For calibrating both the AM and FM, use as low an output voltage as possible from your signal generator.

STEPS	CHASSIS			SIGNAL GENERATOR			INDICATOR		ALIGNMENT	
	AM BANDWIDTH	SELECTOR	STATION SELECTOR	COUPLING	FREQ.	MOD.	TYPE	CONNECTION	ADJUST	INDICATION
1	SHARP	AM	Point of no signal and no interference	AM Gen. connected thru .01-uf cap. in series with hot lead to V6, Pin 7	455 KC	30% AM at 400 cps	AC VTVM	to Ch. B Rec. Output	Z6, Z7 top and bottom	Maximum voltage
2	BROAD	AM	Point of no signal and no interference	AM Gen. connected thru .01-uf cap. in series with hot lead to V6, Pin 7	455 KC	30 KC sweep	Scope	to Ch. B Rec. Output	Z6 Bottom	Adjust slightly for symmetrical curve
3	SHARP	AM	600 KC	AM Gen. connected thru 220-uuf cap. in series with hot lead to antenna terminal 2 Disconnect link between 2 & 1	600 KC	30% AM at 400 cps	AC VTVM	to Ch. B Rec. Output	L10, Z5, L2	Maximum voltage
4	SHARP	AM	1400 KC	AM Gen. connected thru 220-uuf cap. in series with hot lead to antenna terminal 2 Disconnect link between 2 & 1	1400 KC	30% AM at 400 cps	AC VTVM	to Ch. B Rec. Output	C3E, C3C, C34	Maximum voltage
5	Repeat steps 3 and 4 for proper dial calibration and maximum output.									
6		FM	Point of no signal and no interference	FM Gen. connected to ungrounded tube shield of V2	10.7 MC	None	DC VTVM	to test point 2	Z1, Z2, Z3 and Z4, top & bottom	Maximum negative voltage
7		FM	Point of no signal and no interference	FM Gen. connected to ungrounded tube shield of V2	10.7 MC	None	Connect VT VM	to test point 3	Z4, top	Zero reading on zero center scale
8		FM	90 MC	FM Gen. connected thru two 120-ohm carbon resistors in series with lead to antenna terminals 3 and 4	90 MC	30% FM (22.5 KC Dev.) at 400 cps	DC VTVM	to the junction of R32 and R25 and scope to Ch. A. Rec. Output	L7, L6 and L3	Check for sine waveform and adjust for maximum negative voltage
9		FM	106 MC	FM Gen. connected thru two 120-ohm carbon resistors in series with lead to antenna terminals 3 and 4	106 MC	30% FM (22.5 KC Dev.) at 400 cps	DC VTVM	to the junction of R32 and R25 and scope to Ch. A. Rec. Output	C21, C12	Check for sine waveform and adjust for maximum negative voltage
10	Repeat steps 8 and 9 for proper dial calibration and maximum output.									

AM ALIGNMENT

FM ALIGNMENT

SCHEMATIC DIAGRAM • TUNER SECTION

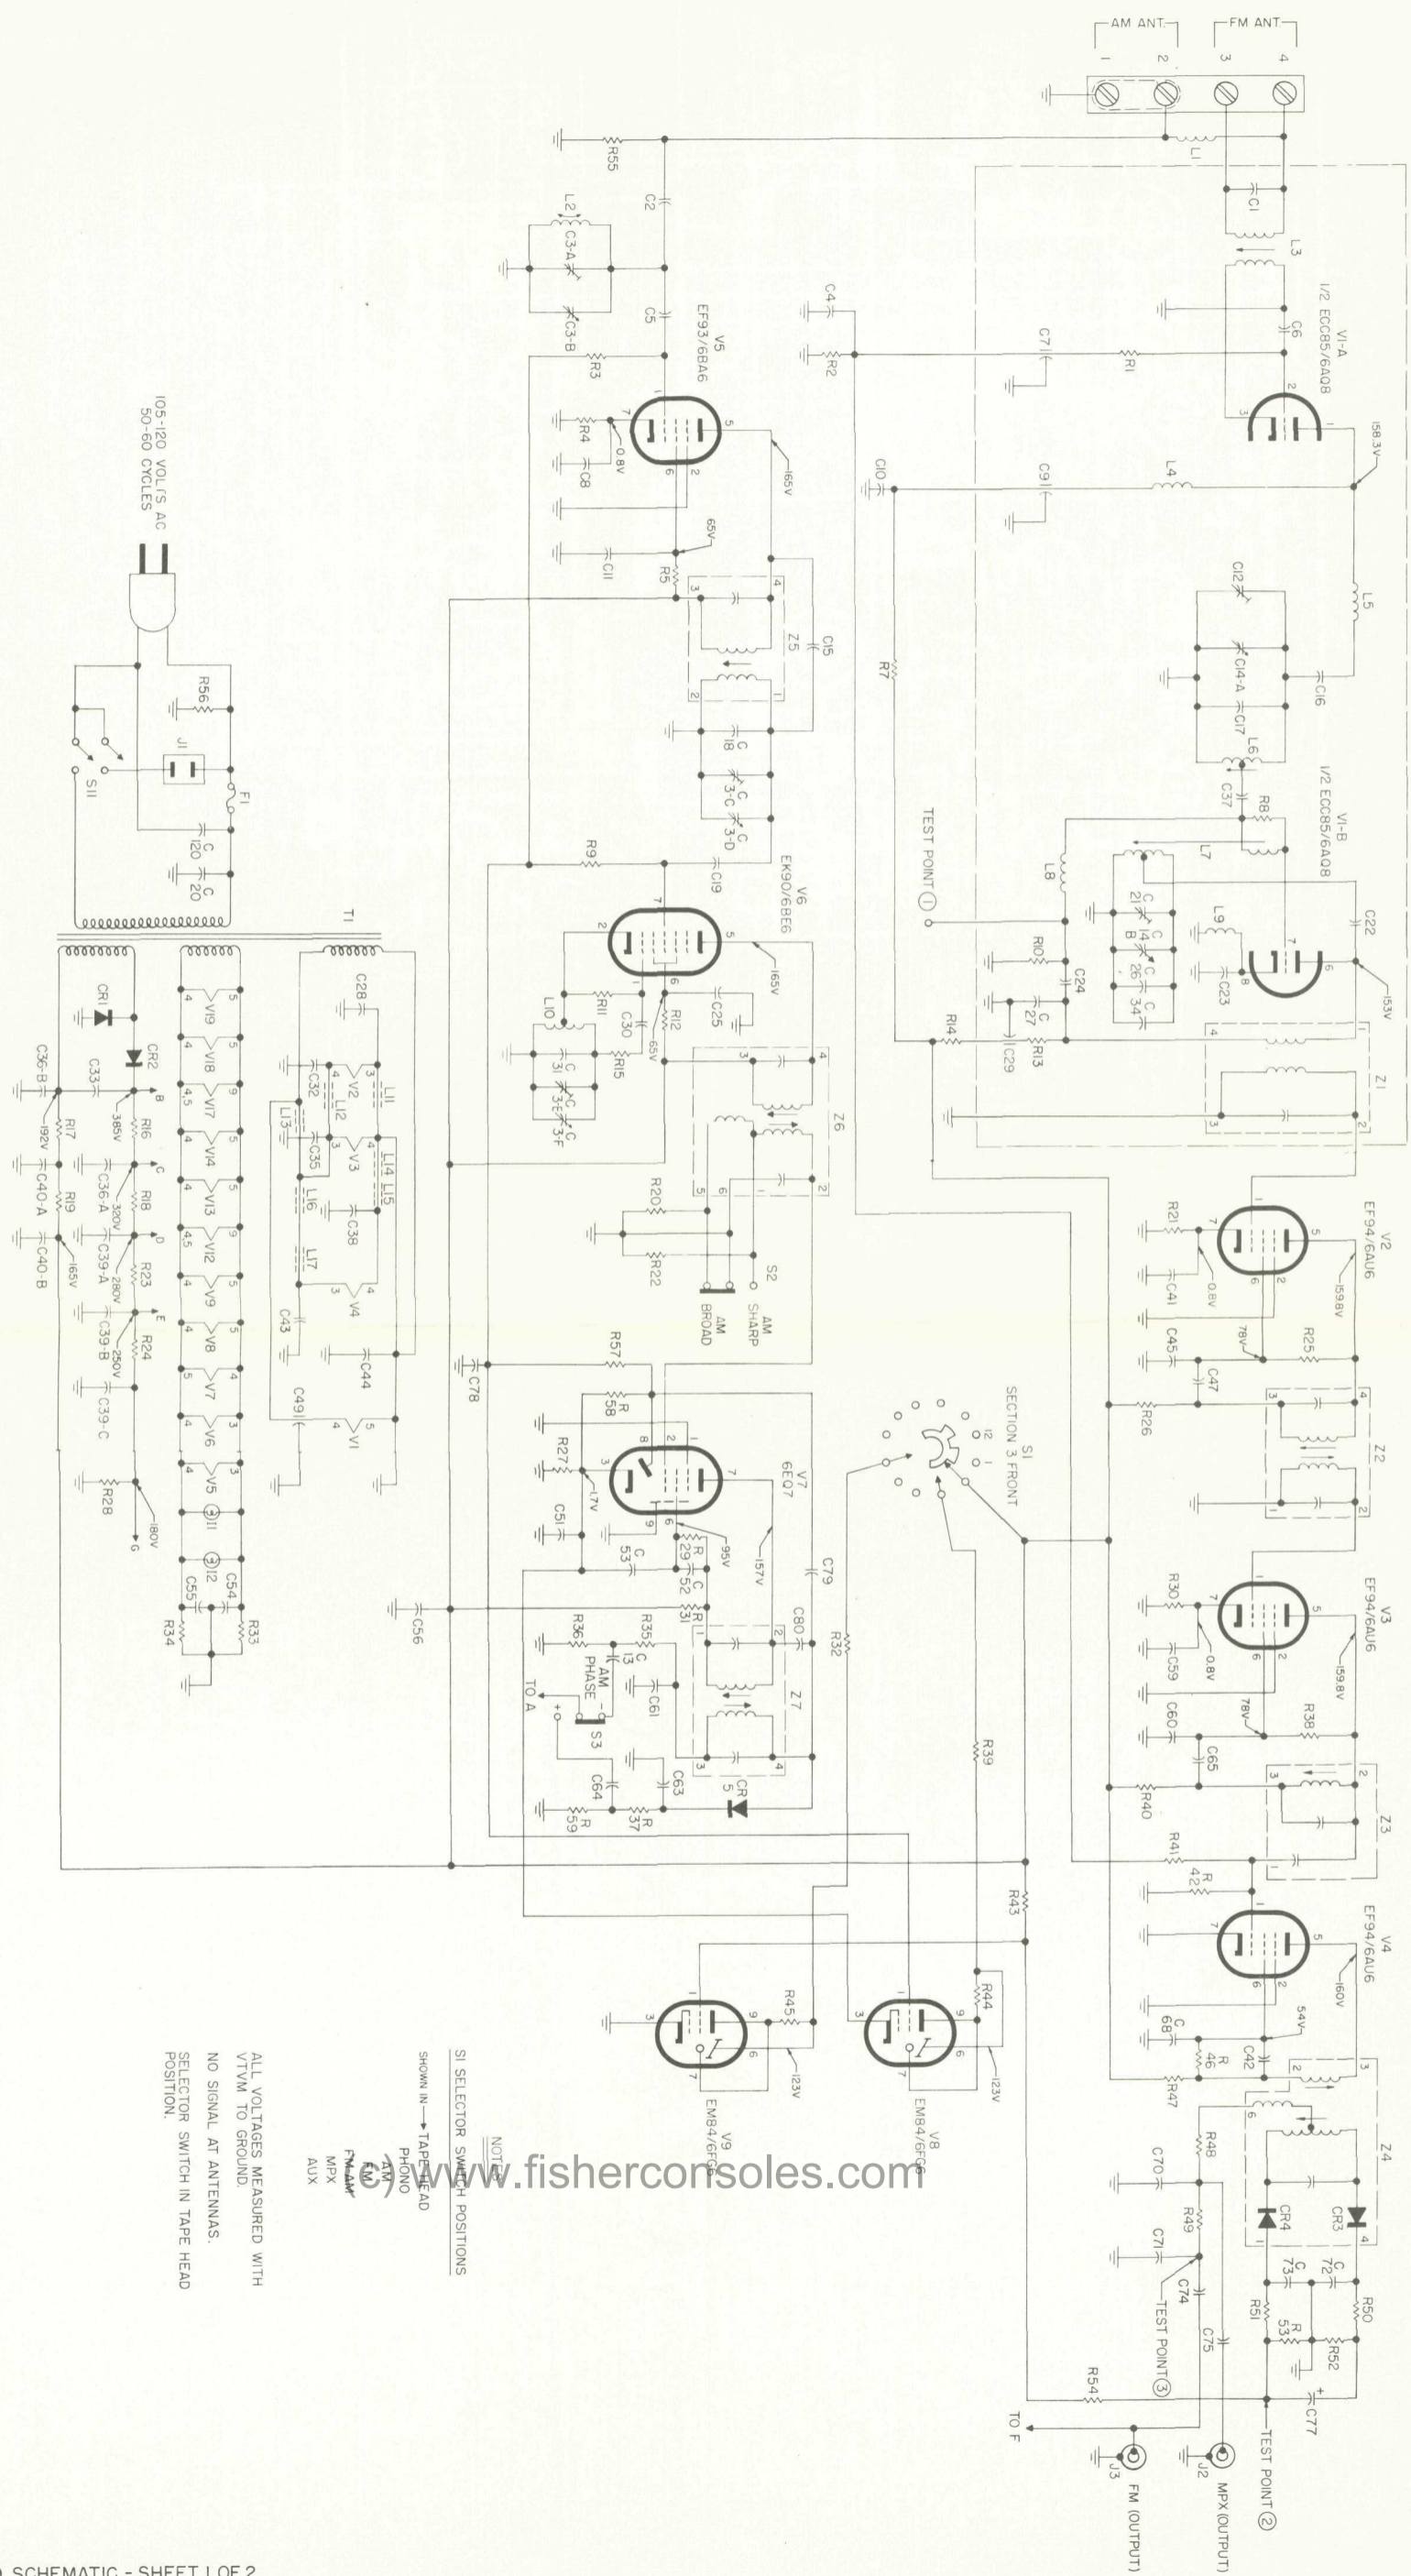


ALL VOLTAGES MEASURED WITH
VTVM TO GROUND.
NO SIGNAL AT ANTENNAS.
SELECTOR SWITCH IN TAPE HEAD
POSITION.

NOTE:
SI SELECTOR SWITCH POSITIONS
SHOWN IN → TAPE HEAD
PHONO
FM
AUX


RESISTORS	CAPACITORS
R55	C1
R1	C2
R2	C3-A
R3	C4
R4	C5
R5	C6
R6	C7
R7	C8
R8	C9
R9	C10
R10	C11
R11	C12
R12	C13
R13	C14
R14	C15
R15	C16
R16	C17
R17	C18
R18	C19
R19	C20
R20	C21
R21	C22
R22	C23
R23	C24
R24	C25
R25	C26
R26	C27
R27	C28
R28	C29
R29	C30
R30	C31
R31	C32
R32	C33
R33	C34
R34	C35
R35	C36
R36	C37
R37	C38
R38	C39
R39	C40
R40	C41
R41	C42
R42	C43
R43	C44
R44	C45
R45	C46
R46	C47
R47	C48
R48	C49
R49	C50
R50	C51
R51	C52
R52	C53
R53	C54
R54	C55
R55	C56
R56	C57
R57	C58
R58	C59
R59	C60
R60	C61
R61	C62
R62	C63
R63	C64
R64	C65
R65	C66
R66	C67
R67	C68
R68	C69
R69	C70
R70	C71
R71	C72
R72	C73
R73	C74
R74	C75
R75	C76
R76	C77

SCHEMATIC DIAGRAM • AMPLIFIER SECTION

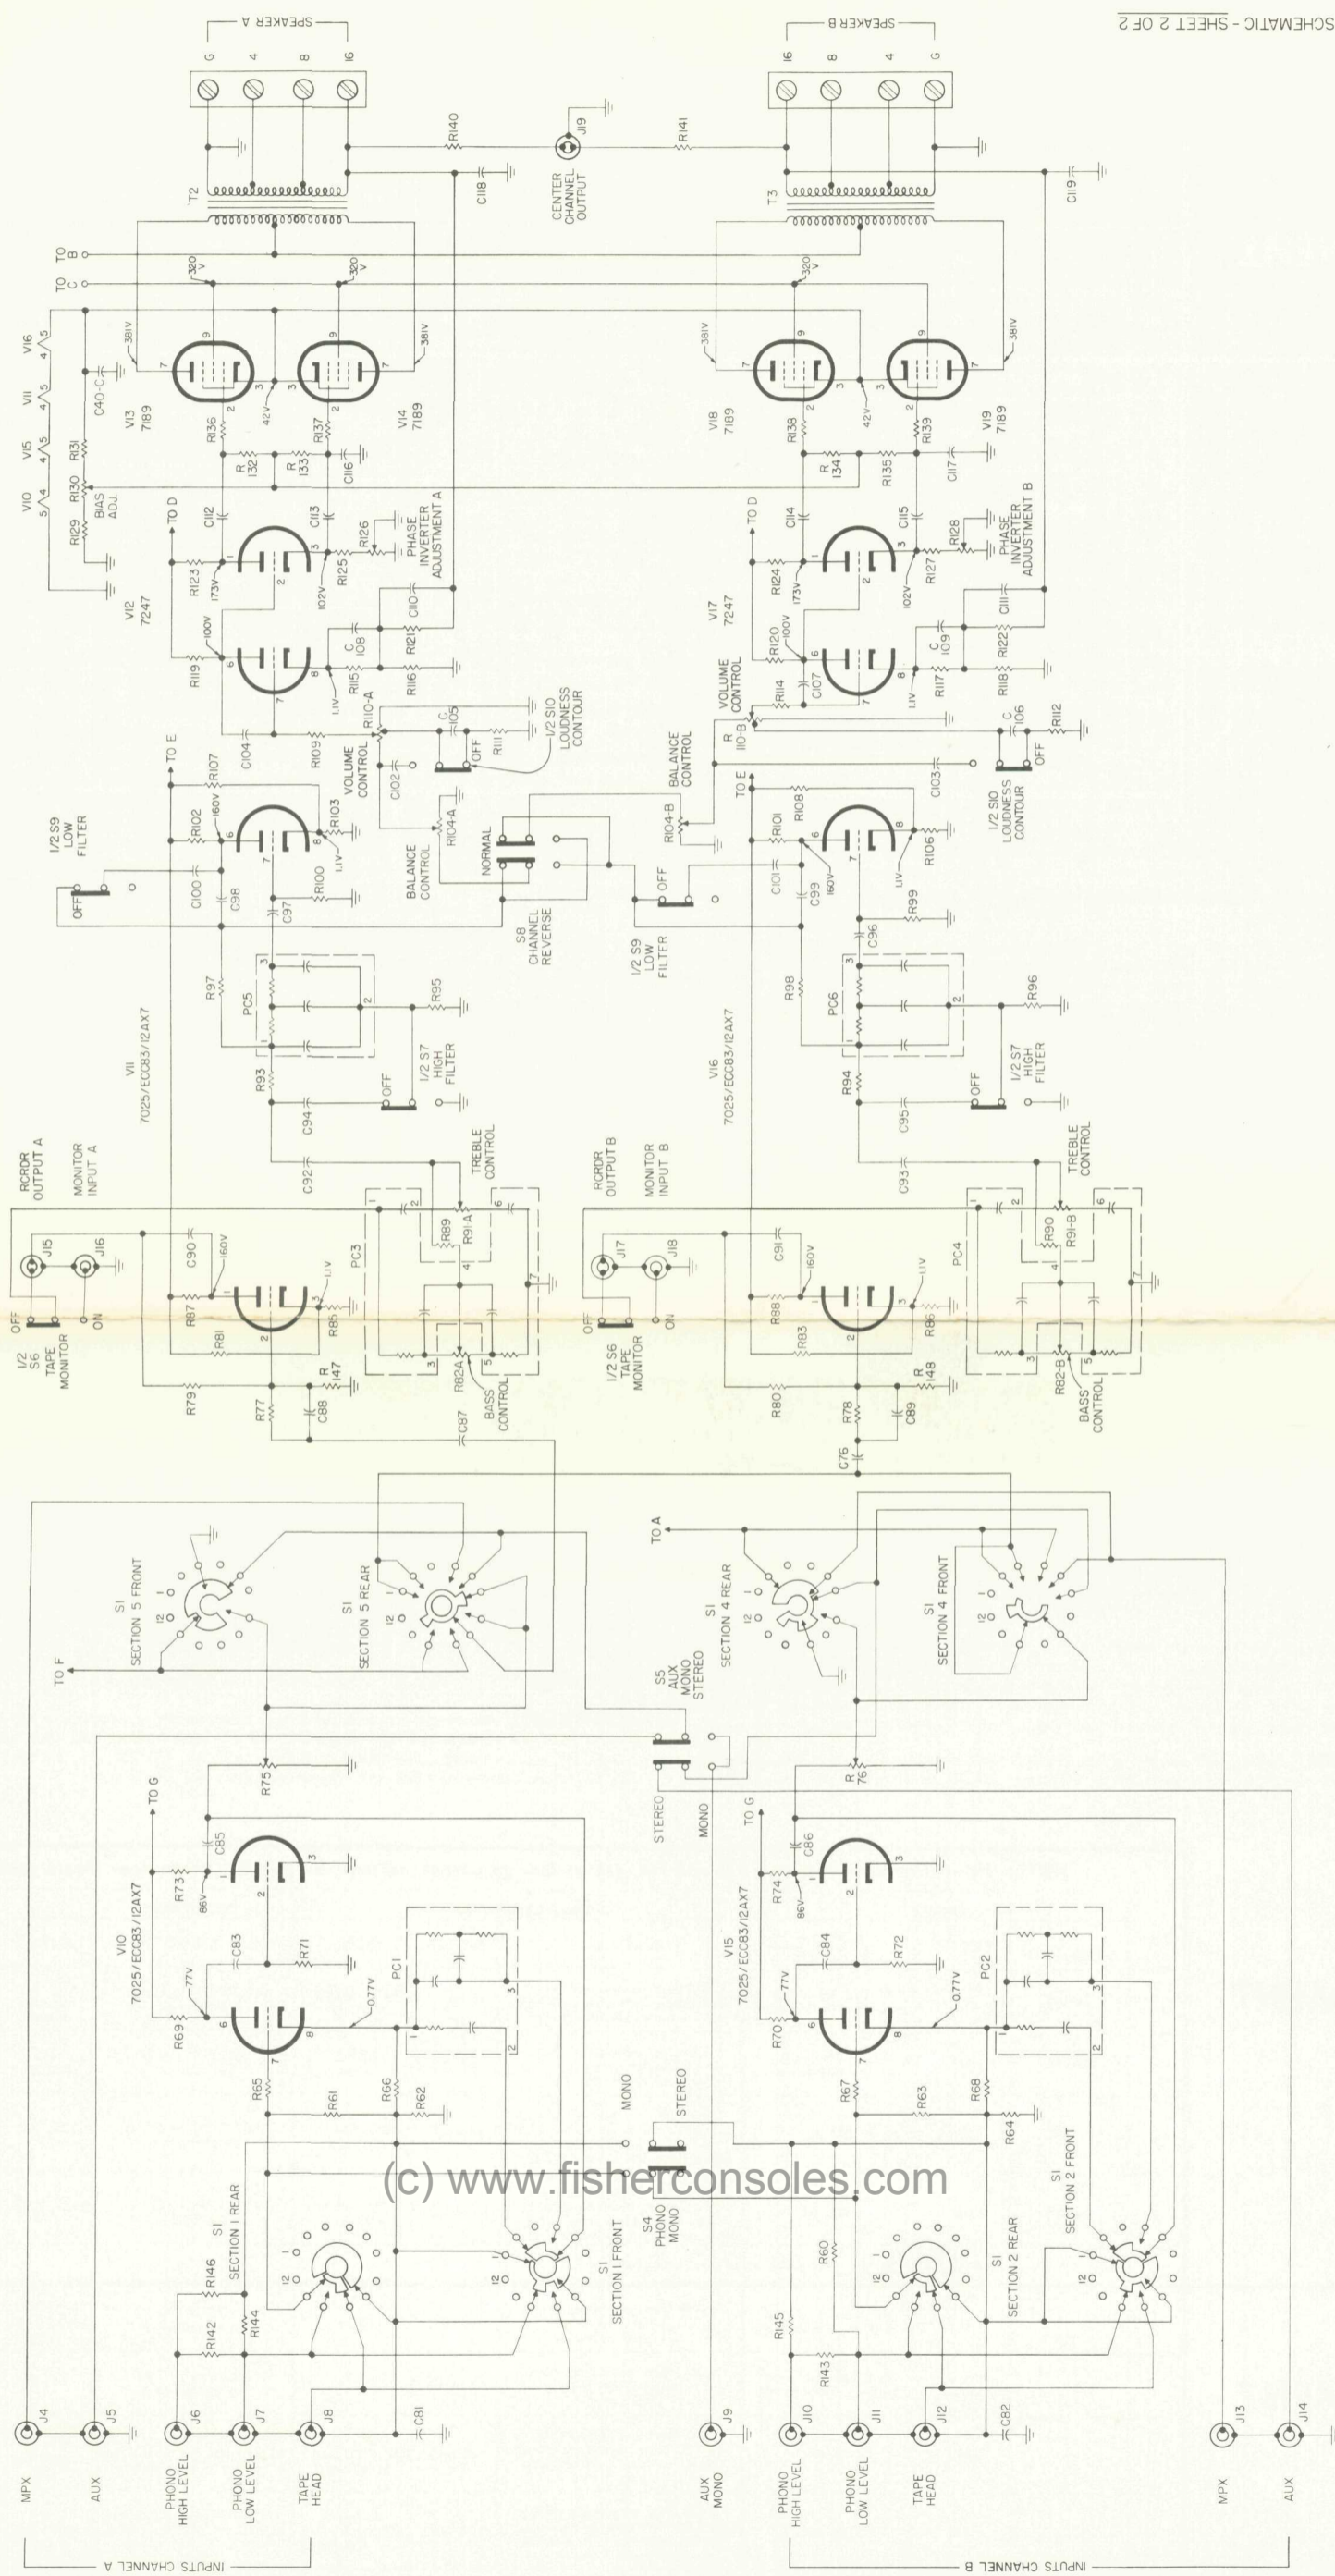

RESISTORS	CAPACITORS
R142 R144 R146 R60	C81 C82
R143 R145	C83 C84
R61 R65	C85 C86
R62 R66	
R63 R67	
R64 R68	
R77 R79 R81 R85 R87 R89	C90 C91
R78 R80 R82 R86 R88 R90	C92 C93
R147 R83	C94 C95
R148	C96 C97 C100
	C98 C101
	C99
R33 R34	R106
R95 R97	R107
R96 R98	R108
	R109
	R110
	R111
	R112
	R113
	R114
	R115
	R116
	R117
	R118
	R119
	R120
	R121
	R122
	R123
	R124
	R125
	R126
	R127
	R128
	R129
	R130
	R131
	R132
	R133
	R134
	R135
	R136
	R137
	R138
	R139
	R140
	R141
	R149
	R150
	R151
	R152
	R153
	R154
	R155
	R156
	R157
	R158
	R159
	R160
	R161
	R162
	R163
	R164
	R165
	R166
	R167
	R168
	R169
	R170
	R171
	R172
	R173
	R174
	R175
	R176
	R177
	R178
	R179
	R180
	R181
	R182
	R183
	R184
	R185
	R186
	R187
	R188
	R189
	R190
	R191
	R192
	R193
	R194
	R195
	R196
	R197
	R198
	R199
	R200
	R201
	R202
	R203
	R204
	R205
	R206
	R207
	R208
	R209
	R210
	R211
	R212
	R213
	R214
	R215
	R216
	R217
	R218
	R219
	R220
	R221
	R222
	R223
	R224
	R225
	R226
	R227
	R228
	R229
	R230
	R231
	R232
	R233
	R234
	R235
	R236
	R237
	R238
	R239
	R240
	R241
	R242
	R243
	R244
	R245
	R246
	R247
	R248
	R249
	R250
	R251
	R252
	R253
	R254
	R255
	R256
	R257
	R258
	R259
	R260
	R261
	R262
	R263
	R264
	R265
	R266
	R267
	R268
	R269
	R270
	R271
	R272
	R273
	R274
	R275
	R276
	R277
	R278
	R279
	R280
	R281
	R282
	R283
	R284
	R285
	R286
	R287
	R288
	R289
	R290
	R291
	R292
	R293
	R294
	R295
	R296
	R297
	R298
	R299
	R300
	R301
	R302
	R303
	R304
	R305
	R306
	R307
	R308
	R309
	R310
	R311
	R312
	R313
	R314
	R315
	R316
	R317
	R318
	R319
	R320
	R321
	R322
	R323
	R324
	R325
	R326
	R327
	R328
	R329
	R330
	R331
	R332
	R333
	R334
	R335
	R336
	R337
	R338
	R339
	R340
	R341
	R342
	R343
	R344
	R345
	R346
	R347
	R348
	R349
	R350
	R351
	R352
	R353
	R354
	R355
	R356
	R357
	R358
	R359
	R360
	R361
	R362
	R363
	R364
	R365
	R366
	R367
	R368
	R369
	R370
	R371
	R372
	R373
	R374
	R375
	R376
	R377
	R378
	R379
	R380
	R381
	R382
	R383
	R384
	R385
	R386
	R387
	R388
	R389
	R390
	R391
	R392
	R393
	R394
	R395
	R396
	R397
	R398
	R399
	R400
	R401
	R402
	R403
	R404
	R405
	R406
	R407
	R408
	R409
	R410
	R411
	R412
	R413
	R414
	R415
	R416
	R417
	R418
	R419
	R420
	R421
	R422
	R423
	R424
	R425
	R426
	R427
	R428
	R429
	R430
	R431
	R432
	R433
	R434
	R435
	R436
	R437
	R438
	R439
	R440
	R441
	R442
	R443
	R444
	R445
	R446
	R447
	R448
	R449
	R450
	R451
	R452
	R453
	R454
	R455
	R456
	R457
	R458
	R459
	R460
	R461
	R462
	R463
	R464
	R465
	R466
	R467
	R468
	R469
	R470
	R471
	R472
	R473
	R474
	R475
	R476
	R477
	R478
	R479
	R480
	R481
	R482
	R483
	R484
	R485
	R486
	R487
	R488
	R489
	R490
	R491
	R492
	R493
	R494
	R495
	R496
	R497
	R498
	R499
	R500
	R501
	R502
	R503
	R504
	R505
	R506
	R507
	R508
	R509
	R510
	R511
	R512
	R513
	R514
	R515
	R516
	R517
	R518
	R519
	R520
	R521
	R522
	R523
	R524
	R525
	R526
	R527
	R528
	R529
	R530
	R531
	R532
	R533
	R534
	R535
	R536
	R537
	R538
	R539
	R540
	R541
	R542
	R543
	R544
	R545
	R546
	R547
	R548
	R549
	R550
	R551
	R552
	R553
	R554
	R555
	R556
	R557
	R558
	R559
	R560
	R561
	R562
	R563
	R564
	R565
	R566
	R567
	R568
	R569
	R570
	R571
	R572
	R573
	R574
	R575
	R576
	R577
	R578
	R579
	R580
	R581
	R582
	R583
	R584
	R585
	R586
	R587
	R588
	R589
	R590
	R591
	R592
	R593
	R594
	R595
	R596
	R597
	R598
	R599
	R600
	R601
	R602
	R603
	R604
	R605
	R606
	R607
	R608
	R609
	R610
	R611
	R612
	R613
	R614
	R615
	R616
	R617
	R618
	R619
	R620
	R621
	R622
	R623
	R624
	R625
	R626
	R627
	R628
	R629
	R630
	R631
	R632
	R633
	R634
	R635
	R636
	R637
	R638
	R639
	R640
	R641
	R642
	R643
	R644
	R645
	R646
	R647
	R648
	R649
	R650
	R651
	R652
	R653
	R654
	R655
	R656
	R657
	R658
	R659
	R660
	R661
	R662
	R663
	R664
	R665
	R6

TUBE LAYOUT

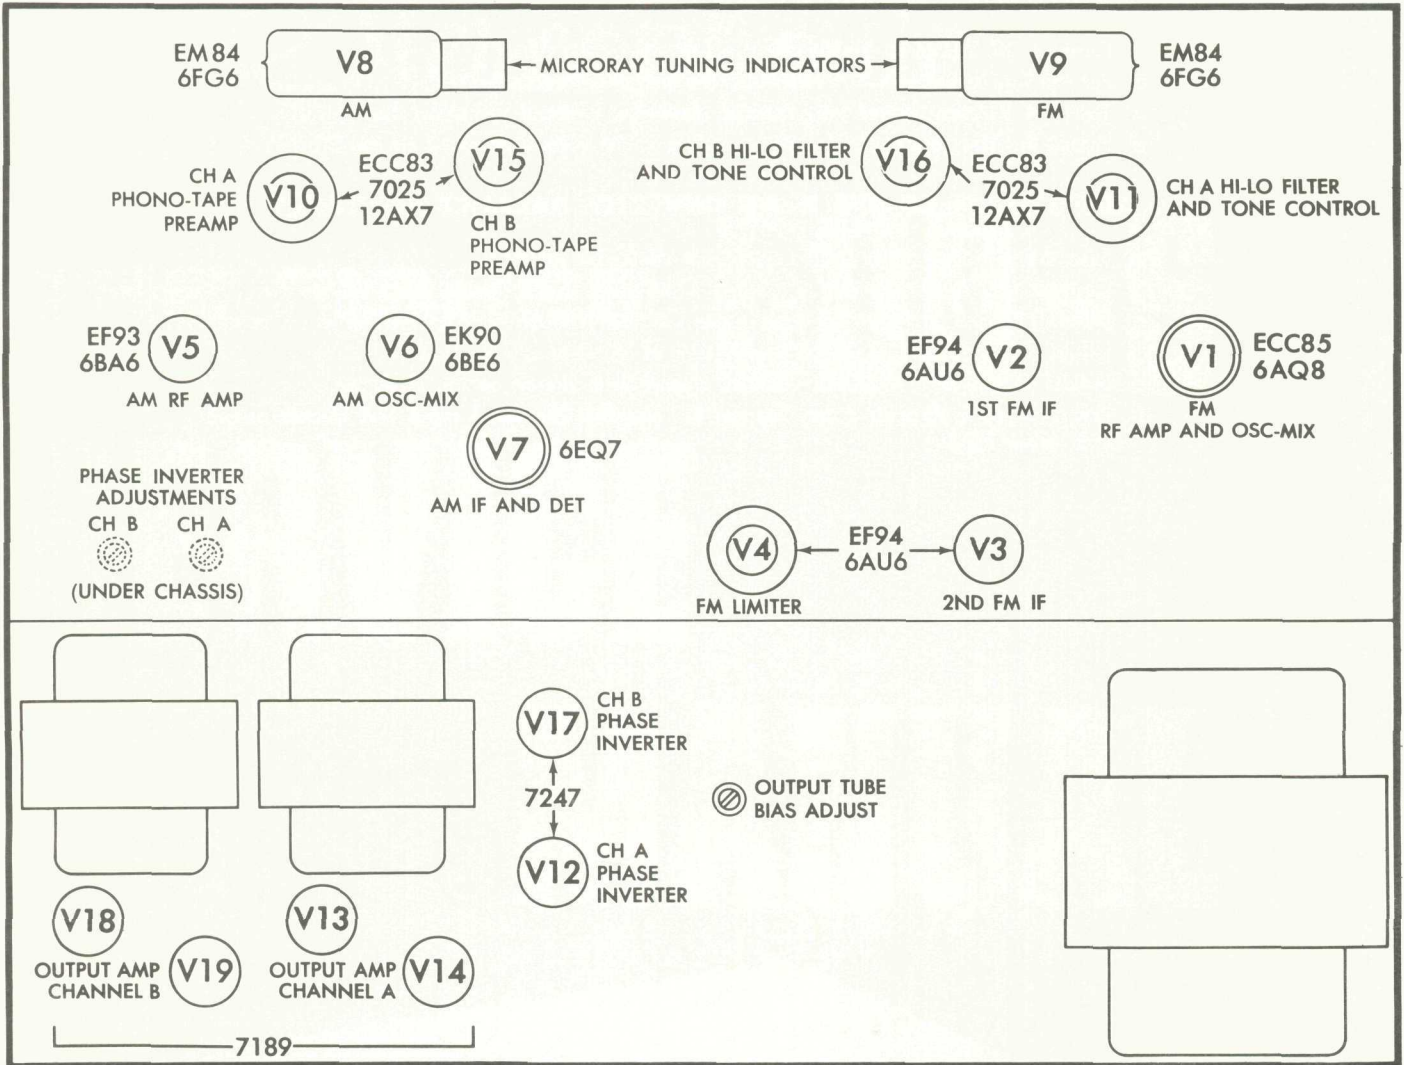

AV 1752

AUDIO ADJUSTMENTS

TEST EQUIPMENT: Variable transformer for line voltage, DC VTVM, IM distortion analyzer, and 16-ohm, 25-watt resistor.

1 ADJUSTMENT OF OUTPUT TUBE BIAS

- a Connect DC VTVM to Pin 3 (cathode) of any output tube.
- b Set the line voltage to 117 volts with the variable transformer.
- c Turn the Volume control fully counter clockwise (without switching the set OFF).
- d Adjust the Bias control, R131, until a reading of 44 volts is obtained on the DC VTVM.

2 ADJUSTMENT OF THE PHASE INVERTER BALANCE CONTROLS

- a Turn the Volume control to the maximum clockwise position.
- b Connect the 16-ohm resistor across the Channel A 16-ohm output on the amplifier.
- c Connect the IM distortion analyzer to the Channel A AUX input, and to the amplifier output.
- d Adjust the analyzer output until an output of 15 watts is indicated.
- e Adjust R126 until a minimum value of distortion is shown on the analyzer.
- f Repeat steps b through d for Channel B. Use the Channel B input and 16-ohm output and adjust R128.



FISHER RADIO CORPORATION • NEW YORK

N799-105A

Printed in U.S.A.
(c) www.fisherconsoles.com

83W10C-120