

FISHER RADIO CORPORATION

21-21 FORTY-FOURTH DRIVE • LONG ISLAND CITY I, N. Y.



THE FISHER

Contemporary

IMPORTANT INSTALLATION NOTE!

The four legs for The Contemporary are packed in a separate carton to avoid damage in shipment. This carton is stapled in place in the rear of the tuner compartment.

After The Contemporary has been unpacked, locate the leg carton and proceed as follows:

1. Using a small screwdriver, carefully pry out the metal staples in the leg carton flap and slide the carton out. Do not reach behind the carton to remove it, as you may disturb chassis components.

Remove the four legs from the carton and continue the installation in the following manner:

2. Carefully lay the cabinet on its back. Keep the tuner door and record compartment lid closed. Do not loosen the record changer until the legs have been installed and the cabinet is upright.
3. Screw the legs into position on the bottom of the cabinet in the mounting holes provided. No hardware is required.
4. Carefully set the cabinet upright on its legs.

Consult the Operating Instructions on how to proceed with the installation of The Contemporary from this point.